

© 1999-2024 AGG Software

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Printed: 11/2/2024

Publisher

AGG Software

Production

© 1999-2024 AGG Software http://www.aggsoft.com

L

Table of Contents

Part 1	Introduction	1
1	About Advanced Serial Data Logger	1
2	Glossary	2
-		2
Part 2	License, registration, and	
	technical support	4
1	License	4
2	l imitations	5
		0
3	How to acquire a license	5
4	Support	6
Part 3	Installation	6
1	System requirements	6
2	Installation process	6
Dort 4		6
Fail 4	Frogramuse	U
1	Getting started	6
2	Introduction	8
3	Data flow diagram	9
4	Work complete	. 10
5	Useful advices	. 10
6	Configuration	. 11
	Serial port	11
	Serial (COM) port	11
	Additional parameters	17
	Data view change	17
	Date/time configuration	18 10
	Log files	21
	Log rotation	21
	Log file access	24
	Log deletion	25
	Modules	26
	OPC server	20
7	Program options	33
•	Window view	33
	Date/time stamp view	35
	Protocol and errors handling	36
	Service mode on Windows 2000+	38
	Configuration	38
	Window s Vista+ notes	42

II	Adva	anced Serial Data Logger Restart & Security	43
Ρ	art 5	Serial communications overview	0
	1	RS-232	. 0
	2	DB9 (9 pin) RS-232 port pinout	. 0
	3	DB25 (25 pin) RS-232 port pinout	. 0
	4	RS-232 loopback devices	. 0
	5	RS-232 data transfer cables	. 0
Ρ	art 6	Having problems? 4	4
	1	Program doesn't run or work	44
	2	FAQ	45

1 Introduction

1.1 About Advanced Serial Data Logger

Advanced Serial Data Logger inputs RS232 data directly into file, Excel, Access, or any Windows application. Advanced Serial Data Logger provides real-time data collection from any serial device or instrument. Send and receive RS232 data across an RS232 port or RS485 port with hardware converter.

Advanced Serial Data Logger captures serial data, custom tailors it to your needs, then extract bits of data from data packets and transfers the data to any Windows or DOS application - either by sending keystrokes to the application's window, sending the data through DDE (Dynamic Data Exchange) conversations, ODBC, OLE.

Key features of Advanced Serial Data Logger are:

- variable data receive;
- received data output without any changes to file;
- variable format file forming setting (on time, data, size, etc.);
- connection parameters flexible setting (baud rate, data bits, etc.);
- data flow hardware and software control;
- work with RS-485 protocol;
- work in spy (sniffer) mode;
- auto program restart in showed time;
- program message logging;
- advanced data parser that allows you to parse, filter and format more complex data from more sophisticated devices;
- data export to any database, for which is ODBC-driver (MS SQL, Oracle, MS Access, MS Excel, dBase and others). On the base of received data, you can spy calls, call's length, calling number, etc. After data transmit to any "office" data base (MS Excel, MS Access) you can build a report of any difficulty without the help of professionals.
- Advanced Serial Data Logger can run as DDE server and can export received data;
- Advanced Serial Data Logger can use the direct connection (use OLE) to Microsoft Excel and write data directly to rows or columns;
- you can also define format expressions that allow you to do things like force a specific number of decimal places in numeric values or force data to contain an exact number or sequence of characters.
- plugin modules connection, extending program capabilities.
- It supports various operating systems. The logger runs on all versions starting from Windows 2000, including 32 and 64-bit systems.

Advanced Serial Data Logger also transmits requests or commands out the serial port to control or query your instruments directly from Advanced Serial Data Logger over ASCII or MODBUS protocol. Think of Advanced Serial Data Logger as a fully customizable serial I/O device driver.

Advanced Serial Data Logger has a simple, menu-driven step by step set-up. Programming is not required to configure the software to collect data from and control most serial devices.

Advanced Serial Data Logger also is a Windows 2000+ service that records all data received on a serial port to a file on a disk or to other targets. It was originally designed to record telephone traffic

data from a phone system (PBX) for later analysis. However, Advanced Serial Data Logger is generic enough to be useful whenever one-way serial traffic needs to be recorded.

Advanced Serial Data Logger has the capability to run multiple instances simultaneously so that multiple ports can be logged.

Unlike most other serial logging applications, Advanced Serial Data Logger runs as a service so that it starts as soon as the operating system starts and doesn't require a user to log in and run it. It will continue to run even as a user logon and logoff the workstation.

It is extremely easy to use! The configuration process is fully menu-driven and has complete, context-sensitive, online help. You can easily customize all input to your exact specifications. Once you see how easy it is to use Advanced Serial Data Logger, you will never again take data readings by hand!

Company home page: <u>https://www.aggsoft.com/</u> Software home page: <u>https://www.aggsoft.com/serial-data-logger.htm</u> Serial port hardware reference: <u>https://www.aggsoft.com/rs232-pinout-cable/</u>

1.2 Glossary

ASCII - An acronym for American Standard Code for Information Interchange. ASCII files are plain, unformatted text files that are understood by virtually any computer. Windows Notepad and virtually any word processor can read and create ASCII files. ASCII files usually have the ".TXT" extension (e.g., README.TXT).

Binary File - A file that contains data or program instructions written in ASCII and extended ASCII characters.

Bit - A binary digit in the binary numbering system. Its value can be 0 or 1. In an 8-bit character scheme, it takes 8 bits to make a byte (character) of data.

Bytes - A collection of eight bits that represent a character, letter or punctuation mark.

Cable - Transmission medium of copper wire or optical fiber wrapped in a protective cover.

Client/Server - A networking system in which one or more file servers (Server) provide services; such as network management, application, and centralized data storage for workstations (Clients).

COM port - Short for a serial communication port. Most serial communication software communicates with a computer through a communication port, and most IBM and IBM-compatible computers support up to four serial ports COM1, COM2, COM3, and COM4. Additional ports can be added by adding additional hardware.

Data bits - A group of bits (1's and 0's) that represents a single character or a byte. Typically, there are seven or eight data bits. During an asynchronous communication (e.g., BitCom connecting to CompuServe), each side must agree on the number of data bits. Data bits are preceded by a start bit and followed by an optional parity bit and one or more stop bits.

Flow control - A method of controlling the amount of data that two devices exchange. In data communications, flow control prevents one modem from "flooding" the other with data. If data comes

in faster than it can be processed, the receiving side stores the data in a buffer. When the buffer is nearly full, the receiving side signals the sending side to stop until the buffer has space again. Between hardware (such as your modem and your computer), hardware flow control is used; between modems, software flow control is used.

Handshaking - is how the data flow between computers/hardware is regulated and controlled. Two distinct kinds of handshaking are described: Software Handshaking and Hardware Handshaking. An important distinction between the kinds of signals of the interface is between data signals and control signals. Data signals are simply the pins which actually transmit and receive the characters, while control signals are everything else.

PC - abbreviation for a Personal Computer.

Parity - In data communications, parity is a simple procedure of checking the integrity of transmitted data. The most common type of parity is Even, in which the number of 1's in a byte of data adds up to an even number, and None, in which a parity bit is not added.

Ports - is a connection point for a cable.

Protocol - is a formal description of a set of rules and conventions that govern how devices on a network exchange information.

RS232, RS423, RS422, AND RS485 - The Electronics Industry Association (EIA) has produced standards for RS232, RS423, RS422, and RS485 that deal with data communications. EIA standards where previously marked with the prefix "RS" to indicate the recommended standard. Presently, the standards are now generally indicated as "EIA" standards to identify the standards organization.

Electronic data communications will generally fall into two broad categories: single-ended and differential. RS232 (single-ended) was introduced in 1962. RS232 has remained widely used, especially with CNC control builders. The specification allows for data transmission from one transmitter to one receiver at relatively slow data rates (up to 20K bits/second) and short distances (up to 50' @ the maximum data rate). This 50' limitation can usually be exceeded to distances of 200' or more by using low capacitance cable and keeping the data rates down to 9600 baud and lower.

RTS/CTS Hardware handshaking - uses additional wires to tell a sending device when to stop or start sending data. DTR and RTS refer to these Hardware handshaking lines. You can select whether you need to use DTR or RTS individually or use both lines for hardware handshaking. See also Xon/Xoff.

Stop bits - In data communication, one or two bits used to mark the end of a byte (or character). At least one stop bit is always sent.

2 License, registration, and technical support

2.1 License

Copyright © 1999-2024 AGG Software. All Rights Reserved

SOFTWARE LICENSE

Trial Limited Version

The trial limited version of this software may be used for evaluation purposes at the user's own risk for a trial period. At the end of the trial period, the user must either purchase a license to continue using the software or remove it from his/her system.

The trial limited version may be freely distributed, provided the distribution package is not modified. No person or company may charge a fee for the distribution of Advanced Serial Data Logger without written permission from the copyright holder.

Licensed Version

On payment of the appropriate license fee, the user is granted a non-exclusive license to use Advanced Serial Data Logger on one computer (i.e. a single CPU), for any legal purpose, at a time. The registered software may not be rented or leased but may be permanently transferred, if the person receiving it agrees to the terms of this license. If the software is an update, the transfer must include the update and all previous versions.

Registered customers are entitled to free updates during one year from the date of purchase. It means that for one year you can download and install the latest registered versions of Advanced Serial Data Logger from our site. If you would rather not purchase an update, you can use the program forever; it will never expire, but you won't be able to use the latest version. If you purchased the software more than one year ago, you are no longer entitled to free upgrade and technical support; however, you can purchase an update to the latest version at a special, greatly discounted price, and this update will allow you to have free updates and technical support for another year. The type of the update license must match the type of your existing license.

Whilst every care has been taken in the construction and testing of this software, it is supplied subject to the condition that the user undertakes to evaluate the suitability of the control for his/her purposes. AGG Software makes no representation of the software's suitability for any purpose, and the user agrees that AGG Software has no responsibility for any loss or damage occasioned by the use of this software.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE SOFTWARE, AND DOCUMENTATION ARE PROVIDED "AS IS" AND AGG SOFTWARE DISCLAIMS ALL OTHER WARRANTIES AND CONDITIONS, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, CONFORMANCE WITH DESCRIPTION, TITLE AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL AGG SOFTWARE BE LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL OR EXEMPLARY DAMAGES OR LOST PROFITS WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE PRODUCT, EVEN IF AGG SOFTWARE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN ANY CASE, AGG SOFTWARE'S CUMULATIVE AND ENTIRE LIABILITY TO YOU OR ANY OTHER PARTY FOR ANY LOSS OR DAMAGES RESULTING FROM ANY CLAIMS, DEMANDS OR ACTIONS ARISING OUT OF OR RELATING TO THIS AGREEMENT SHALL NOT EXCEED THE PURCHASE PRICE PAID FOR THIS LICENSE.

Should any term of these terms and conditions be declared void or unenforceable by any court of competent jurisdiction, such declaration shall have no effect on the remaining terms hereof.

If you do not agree to these conditions, you should not install this software.

2.2 Limitations

The unlicensed program works in the trial mode. The program allows testing all features, but it limits the time or amount of processed data. The license key removes all limitations from the trial version. You may purchase a license key here 5° .

The trial version of our software has the following limitations:

- The trial period is limited to 21 days. After that time, the program stops working.
- The continuous program work time is limited to two hours. After that period, the program shows a message and stops working.
- All data export modules can handle the first 100 records only.
- In the spy mode you can receive the first 65535 bytes only.

2.3 How to acquire a license

The unlicensed program works in the trial mode. The license key removes all limitations from the trial version and allows you to use our technical support for one year.

If you want to buy a program through the Internet, visit the <u>order page</u> of our site. On this page, you can get the newest information about the registration process, and also find an order link. Please follow the "Buy now" link, enter your personal information, and choose the most convenient payment method for you. Further, you will get a notification and follow the notes in it.

You may find more information about our policies, payment terms, payment methods, and frequently asked questions on our <u>website</u>.

2.4 Support

6

Technical questions	https://www.aggsoft.com/support/
Common questions	
Sales questions	

3 Installation

3.1 System requirements

Windows 2000 Professional - Windows 10 (2019), including x64 and x86 OS, Workstation, and Server OS.

It is necessary to have at least one free COM port, not busy by any device (mouse, for example) to connect an external device.

3.2 Installation process

If any beta-version was installed on your computer, remove it.

Quit of the working Advanced Serial Data Logger on installation time.

Run an installation file.

By default, the installation wizard installs Advanced Serial Data Logger in the "C:\Programs Files\Advanced Serial Data Logger" or "C:\Programs Files (x86)\Advanced Serial Data Logger" directory of your system disk, but you can change this path.

In the standard distributive of Advanced Serial Data Logger are no additional modules files, which you can download from our <u>site</u>.

4 Program use

4.1 Getting started

After you have successfully installed Advanced Serial Data Logger, use the following simple steps to configure and run it.

Open the Advanced Serial Data Logger program from the Start Menu.

At program run, you get into the main program window (fig. 1), main elements of which are the main menu, the data window, the program messages list, and the status bar.

© 1999-2024 AGG Software

- The data window shows incoming data before or after processing. You can configure the data view mode in the settings
- The drop-down box at the bottom shows all logged program info, warning, and error messages.
- The status bar shows the current state of the selected data source, errors on the data interface, and how many bytes were sent or received.
- The toolbar above the data window provides fast access to the configuration.
- The main menu above the toolbar allows you to edit the program settings [8] ("Options Program settings..."), manage configurations, open the current logfile from the "File" menu (fig. 2).

			_	\times
File View Options	Quick Help			
СОМ1 🗸 🕂 📑 (🗓 🛲 🗎 🤵	r 🕹 🕹	b	
B1051111110026#0D# B1051111110019#0D# B1051111110033#0D# B1051111110123#0D# B1051111110521#0D# B1051111110026#0D# B1051111110019#0D# B1051111110033#0D# B1051111110123#0D#	00A 00A 00A 00A 00A 00A 00A			
 	COM1] OPC serve	r. Initializing tags.	success	 ~
	Fig. 1. Main pr	ogram window	,	



By default (after installation), the program has not any data sources configured. If the list of data sources on the toolbar is empty, then the program will ask you to add a new configuration. Otherwise, the program will fill in the list of data sources and try to start logging of data sources configured. Yes, of course, all your settings are being saved while exiting from the program and loaded during the program start.

Set-Up is as Easy as 1-2-3

Step 1. Configure one or more data sources.

Click the "Add configuration" button on the toolbar with a big green plus and choose <u>communication</u> <u>parameters</u> [11] for your device. The "COM Port settings" tab of the "Configuration options" dialog lets you configure your settings.

Step 2. Configure log file.

Select the "Log file" header in the configuration dialog window and enable logging for a necessary data direction.

Step 3. Define how you want the serial data to be <u>parsed and translated</u> ²⁶.

The "Plugin" button on the toolbar in the main window or "Modules" tab in the dialog window lets you specify how to parse, filter and format your data to the fit the exact format required by your application. It also lets you pre-define automatic output strings to be sent to an external device.

Now, the program process and exports data from one or multiple data sources.

4.2 Introduction

The program can work with any serial devices. Before configuring our software, the following conditions should be executed:

- The device should have an RS-232 serial port interface (you need any additional hardware converter for the RS-485 interface).
- The device is configured to send data to a serial port with or without requests from a computer side.
- You know all information about serial port parameters of your device (If your device uses hardware or software flow control (please, read your device's datasheet), then you should know about flow control type).
- Device's serial port is connected with a computer serial port using a cable (a null-modem or other special cable).
- Computer's COM port, to which your device is connected is not busy, for example by another program.

How to configure port parameters, you can read in the next "Serial port settings 11" chapter.

Advanced Serial Data Logger can save data to a log file(s) without any changes (i.e., create raw binary log files) or write to log files depending on the parser module selected. In the first case, you can view the log file with any hex editor and use this data for further analysis and remaking. In the second case, you can view data with any text editor. You can find more information about log files in the "Log rotation 21" chapter.

You can watch the data in the data window (fig. 1 ⁶). The data view is fully customizable. You can watch data in decimal, hexadecimal, or your format. How to customize data view you can read in the "Data view ¹⁷)" chapter and how to customize program view you can read in the "Window view³³)" chapter.

The data can be exported or transferred to one or more targets. The simplest way is to configure the log file rotation. However, it is small a part of all features of Advanced Serial Data Logger. Advanced Serial Data Logger has many <u>additional modules</u> and the set of the logging software. You can download and install any module supported. Most modules are free of charge for our customers. How to install and configure modules you can read in the "<u>Modules</u> to hapter.

The program and their plugins generate many messages and write them to the list in the main window (fig. 1 ⁶) and a protocol file that you can use for administration of the software. You can also configure types of system messages. More information about it you can read in the "Protocol and errors handling 36" chapter.

4.3 Data flow diagram

This diagram may help you to understand the flow of data within our software and a place of each module. The following chapters describe all plugin types.



Fig. 3. Data flow diagram

History:

- The flow of binary data (RAW, unformatted data).

- The parsed data (formatted data). The data flow is separated into data packets and variables. Each data packet can be interpreted as a row, and each variable can be interpreted as a column.

Wires with other colors mark other relations with the unstructured data flow.

4.4 Work complete

The program saves all settings to the Windows registry when it stops working. All opened data sources will be automatically closed (unlocked, unallocated, or fried).

4.5 Useful advices

1. Look through hint helps on all window elements - it may help you to get a picture of this element's function.

2. You can change all program settings without restarting the program. To transfer settings to another computer, you can do the following:

- 1. Create a configuration backup from the "File" menu and restore it using the same menu.
- Alternatively, export the registry node with all program settings. Start regedit.exe and export the following registry node:

on Windows x64 HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\AGG Software\Advanced Serial Data Logger

on Windows x32 HKEY_LOCAL_MACHINE\SOFTWARE\AGG Software\Advanced Serial Data Logger

3. On another computer import settings to the Windows registry.

Many main window elements have "hot" keys for quick access to its functions.

- Ctrl+S analogs to click on "Start/Pause" button on the toolbar.
- Ctrl+C analogs to click on "Clear" button on the toolbar.
- Ctrl+P opens the window with the configuration settings.
- Ctrl+L opens the window with the log file settings.
- Ctrl+W allows you to configure the data view mode.
- Ctrl+R shows the window with the program settings.
- Ctrl+E shows the Windows 2000+ service settings.
- Ctrl+M here you can configure data query plugins, data parser, and other plugins.

4. You can look at the summary statistic that contains summary about sent and received data, created files, etc. (View - Statistics)

5. You can save program settings to an INI file. It may help to install and use several copies of the program. You can make your choice from the "Options" menu.

6. The program window can display only the last 10 messages. The full program log file (if activated) you can open using the "File - View program protocol file" menu item.

4.6 Configuration

4.6.1 Serial port

4.6.1.1 Serial (COM) port

COM port is short for a serial communication port. Most serial communication software communicates with a computer through a communication port, and most IBM and IBM-compatible computers support up to four serial ports COM1, COM2, COM3, and COM4. Additional ports can be added by adding additional hardware.

Advanced Serial Data Logger can manipulate with many serial ports at the same time (up to 255 serial ports).

You can open serial ports in Advanced Serial Data Logger software in two modes:

- 1. **Spy mode**. In this mode the program monitor data flow on ports selected. In this mode, Advanced Serial Data Logger intercepts all data exchange between any Windows application and external device.
- 2. **Standard**. In this mode, the program opens a serial port through Windows API functions, and read/write data from/to a serial port as a regular Windows application. In this mode opens a serial port with exclusive rights and other application will not have access to a serial port.

If one or more ports are configured already, then Advanced Serial Data Logger is opening these ports and starting logging. If the port is opened successful, then the status bar in the main window displays a status of this port (fig. 1 6). However, before you should configure serial port parameters. The configuration can include one or more serial ports with **identical** settings. For example, if you have many identical devices, that connected to different serial ports, then you can specify port numbers in one configuration only. However, if you want to use a serial port with different settings, then you should create more than one configuration.

You can create the new configuration by clicking the "Plus" button in the main window (fig. 1 ⁶)) or through the "Options" menu. After you clicked the "Plus" button, the dialog window will be opened (fig. 5). The dialog window contains few sections with parameters. The "COM port" section is described in this chapter.

You can manage the configuration created with a drop-down menu near the "Plus" button (fig. 4).



Fig. 4. Access to the port configuration

The "COM port settings" tab contains indispensable settings of any serial port: baud rate, data bits, etc. You should configure it with the same values, that your external device uses for data exchange.

Configuration	options				?	×
COM port	COM port	settings				
COM port settings	COM ports	COM1 COM2 COM3 COM11	^			
	Connection para	imeters				_
control	Polling mode	Use event v	vord (fast, bu	t possible prol	blems)	~
	Baud rate	9600	~	Add custor	n	\times
0-	Data bits	8	\sim			
Additional options	Parity	None	\sim			
	Stop bits	1	\sim			
	RS485 interfac	e mode e error clean inc	oming buffer			
Log file	🗹 Try to open aft	er an unsucces	sful attempt			
Other	Try to a	open after XXX	seconds 30	×		
Modules						
				OK	Ca	ncel

Fig. 5. COM port parameters

If you are logging data over RS-485 with an additional hardware converter and your converter doesn't support data direction auto-detection, then specify "**RS485 interface mode**". This option instructs Advanced Serial Data Logger to set the RTS line at a low level while data receiving and vice versa. The serial port driver can detect errors while data receiving (for example, bad quality of a connection

line). You can specify with the "At data receive error clean incoming buffer" option to ignore data blocks, that contain errors and clean an incoming buffer.

In some cases, the program can't open a serial port while starting (for example, the port is already used by other application). With the "**Try to open after an unsuccessful attempt**" option you can specify to try to open the serial port again after the interval specified. The program will try to open the serial port until an attempt will succeed.

Check line status mode

The Windows communication API provides two methods to check for received data and line/modem status changes: API calls (polling) and an event word. The event word is maintained by the Windows communications driver. As data is received or line/modem status changes occur, the driver sets bits in the event word. The application can check the bits to determine if any communication events occurred. If so, the application can make the appropriate API call to clear the event word and retrieve the data or the new line/modem status values.

Windows also provides API calls to retrieve the same status information provided by the event word but the API calls are slower. Advanced Serial Data Logger uses the event word by default for the fastest possible performance. Unfortunately, there is at least one communication driver (WRPI.DRV, included with some U.S. Robotics modems) that doesn't appear to support the event word. For this and similar drivers, select another mode before Advanced Serial Data Logger will receive data.

If you want to rise data transmit adequacy you can use hardware and/or software data flow control (fig. 6). When using hardware data flow control are used some lines (wires) of connecting cable. Depending on used lines, you must configure checks against corresponding fields.

Hardware flow control

When the hardware flow control options are an empty, as they are by default, there is no hardware flow control. The options can be combined to enable hardware flow control.

"Receive flow control" stops a remote device from transmitting while the local input buffer is too full. "Transmit flow control" stops the local device from transmitting while the remote input buffer is too full.

Receive flow control is enabled by including the "Use RTS" and/or "Use DTR" elements in the options. When enabled, the corresponding modem control signals (RTS and/or DTR) are lowered when the input buffer reaches the 90% size of the buffer. The remote must recognize these signals and stop sending data while they are held low.

As the application processes received characters, buffer usage eventually drops below the 10% size of the buffer. At that point, the corresponding modem control signals are raised again. The remote must recognize these signals and start sending data again.

Transmit flow control is enabled by including the "Require CTS" and/or "Require DSR" elements in the options. With one or both of these options enabled, the Windows communications driver doesn't transmit data unless the remote device is providing the corresponding modem status signal (CTS and/or DSR). The remote must raise and lower these signals when needed to control the flow of transmitted characters.

Note that flow control using RTS and CTS is much more common than flow control using DTR and DSR.

Software flow control

This routine turns on one or both aspects of automatic software flow control based on the value assigned to the property.

"Receive flow control" stops a remote device from transmitting while the local receive buffer is too full. "Transmit flow control" stops the local device from transmitting while the remote receive buffer is too full.

Receive flow control is enabled by assigning "On receiving" or "Both" to the "Type" property. When enabled, a Xoff character is sent when the input buffer reaches the 10% level of of the buffer size. The remote must recognize this character and stop sending data after it is received.

As the application processes received characters, buffer usage eventually drops below the 10% level of the buffer. At that point, a Xon character is sent. The remote must recognize this character and start sending data again.

Transmit flow control is enabled by assigning "On transmitting" or "Both" to the "Type" property. The 10% and 90% size of the buffer are not used in this case. When transmit flow control is enabled, the communications driver stops transmitting whenever it receives a Xoff character. The driver does not start transmitting again until it receives a Xon character, or the user sets software flow control to "None'.

Software data flow control can be configured on receive, transmit, or both modes, but so as the great number of a device doesn't need data sending, select the "On receive" control mode. In case of activation of data transmit control, a remote object (your device) can send special codes, signalizing about data transmit stop or start. On default, received from device character 0x11 Hex signalizes to COM port driver to start data receive and character 0x13 Hex - to stop data receiving from a device.

Program use	15
-------------	----

Configuration	options				?	×
COM port	Data flo	Data flow control				
COM port settings	Hardware da	ata flow control R S	[Require D Require C	SR TS	
Data flow control	Software dat Type	Software data flow control Type None				
Additional options	Character th Characters Xo character cod	at is sent to enabl at is sent to enabl off and Xon are er le Hex value)	e remote s e remote s tered in fo	ending (Xon) ending (Xon) rmat #XX (wh	#13 #11	
	In/out buffers size (b) 16000 V 160				16000	~
Log file						
Other						
Modules						
				OK	Ca	ncel

Fig. 6. Data flow control

Spy mode

In this mode, Advanced Serial Data Logger doesn't send and receive any data, and only spies on data exchange, made by other programs. You should enable the "Spy mode" checkbox.

Also, you must start the logger before any other program that can use the selected COM port.

After this, the logger will capture and show data exchange over the selected COM port in the main window.

Note: You must close the program you monitor, before closing Advanced Serial Data Logger.

Serial data transfer errors

Line errors can occur during data exchange and displayed in the main program window in the status bar.

UART receiver parity error - occurs if you configured an invalid parity type.

UART receiver overrun, UART receiver framing error - occurs if you configured an invalid number of stop or data bits. Transmit timeout waiting for CTS,

Transmit timeout waiting for DSR,

Transmit timeout waiting for RLSD - occurs if you configured invalid hardware flow control, or your serial interface cable isn't wired for hardware flow control.

Transmit queue is full - occurs if Advanced Serial Data Logger can't send data to a remote device.

Break - Break signal is received.

Port restart

You can also set the program to initiate the serial interface at the specified time. On some old versions of the Windows NT operating system it could help to avoid the loss of data when the program has been working for a long time without restarting. Please use the "Additional options" tab (fig. 7)

Configuration	options		?	×
COM port	Additional optior	าร		
COM port settings Data flow control	Simple terminal emulation Port initialization	Off 1:00:00		~
Additional options				
Log file]			
Other				
Modules				
		ОК	Ca	ancel

Fig. 7. Additional options

Here you can also select the terminal emulation mode. In this mode, the program will remove or interpret some special terminal sequences automatically.

4.6.2 Additional parameters

4.6.2.1 Data view change

Configuration options ? ×						
COM port	Data view					
Log file	Output type					
Other	Display data before parsing					
	O Display data after pars	ing				
494 1	View characters with code	e				
Data view	0x00h - 0x1Fh	As Hex #XX code				
	0x20h - 0x7Fh	As same character				
Date/time	0x80h - 0xFFh	As same character	~			
stamp	User's format Charset of data					
	#%d	ODOS	Windows			
Name &	Highlight data sent on se	creen				
Security	Data source custom col	or				
	Split strings by data timeout	(ms)	300 🜲			
	Split continuous data blocks large than (ms)					
Modules	Split by characters		#0A			
		OK	Cancel			

Fig. 8. Data view

Data view settings, that can be configured on the "Data view" tab:

- 1. **View characters with code** the program can interpret and decode bytes as characters. You can select decoding mode for each range of character codes. If the range doesn't have the corresponding character, that's why these data can be displayed only in hexadecimal and decimal code.
- 2. You can set up the **user's format** to display a data byte. The directive %d shows to display a decimal code, the directive %x hex code. You can set any framing characters before/after the user format.
- 3. **Highlight data sent on screen** a string with sent data will be highlighted by the selected color.
- 4. **Character set** allows you to define the character set of incoming data. Windows Windows ANSI character set, DOS OEM character set.
- 5. Data source custom color if you've created several configurations then you can define a custom color for each data source that allows you to distinguish data flows on the "All data" page in the main window.

18

- 6. **Split strings by data timeout** this option allows visually splitting data packets in the program window. Data packets that will be received after the specified interval will be shown on a new line. If this value is set to 0, then data packets will not be split.
- 7. **Split continuous data blocks large than** this option allows visually splitting continuous data flow in the program window. The program will show data on a new line if continuous data is longer than the specified number of bytes.
- 8. **Split by characters** this option allows to visually splitting continuous data flow in the program window using the specified symbols. For example (fig. 8), the program will use a character with the 0Ah hexadecimal code that is equal to the "LF" ASCII code.

4.6.2.2 Date/time configuration

This group of options (fig. 9) allows you to configure how timestamps appear in the log file and on the screen. You can configure the stamp format in the program options 35.

Configuration	Configuration options			×
COM port	Date/time stamp			
Log file Other Data view	 Add to display output for data sent Add to display output for data received Add if data direction has been changed Add for data packets (after parsing or s Add at begin of file Stamp timeout (ms) File prefix/postfix character(s) 	d plitted by charac 2000 🜲	:ters)]] >	
Name & Security	Note: Additional date/time stamp options a Main menu -> Options -> Program option ->	re located in pro ∙ Date/time stam	gram op P	otions
		OK	Ca	ancel

Fig. 9. Time stamp configuration

Add to display output for data sent - the time stamp will be added for the sent data displayed on the screen. The stamp will be added according to the timeout (if the data flow is uninterrupted) or when a data packet is sent.

Add to display output for data received - the same but for the received data.

Add if data direction has been changed - if the program is sending and receiving data, the time stamp will be also added when the data transfer direction changes (sending/receiving).

Add for data packets - if the data is displayed after it is processed, the stamp will be added to each processed data packet.

Add at begin of file - the stamp will be added at the beginning of every new log file.

Stamp timeout - if the data flow is uninterrupted, the stamp will be added regularly at the interval specified in milliseconds.

File prefix/postfix character(s) - the program will use these characters instead of those specified in the program options while writing data to a file. For example, it allows you to add the new line character or another sequence of characters before or after the stamp. Example: >#0D#0A

4.6.2.3 Name and security

This group of options (fig. 10) allows you to configure the following parameters:

Friendly name - this name will be added before the port number or the data source in the drop-down list in the main window of the program. It allows you to describe the data source.

Start logging automatically - if this option is enabled the program will start receiving and logging data automatically when it is launched.

The "Security" option group allows you to protect user operations in this particular configuration with a password. You can specify advanced security options applied to the entire program in the program options 43.

Ask password before start and stop - the password will be required when the user clicks the "Start/Pause" button in the main window of the program.

Ask password before configuration edit - the password will be required when the user tries to open the Configuration options dialog box.

Configuration	options	?	\times
COM port	Name & Security		
Log file			
Other	Friendly name		
	Start logging automatically		
A 1	Security		_
Data view	Ask password before start and stop	•••••	
	Ask password before configuration edit	•••••	
ଁ			
Date/time			
Stamp			
R			
Name &			
Security			
Modules			
			ancel
	En 40 Nove en de l'ét		ancer

Fig. 10. Name and security

4.6.3 Log files

4.6.3.1 Log rotation

The main function of Advanced Serial Data Logger is logging data to a file (so-called, log file). The "Log rotation" tab has a rich set of options for it. (fig. 11).

Configuration	Configuration options ?					?	×
COM port	Log rotation	g rotation					
Log file							
	Log file rotation for a	data rece	ived				\sim
%	🗹 Create log file:	s on dis	k				
Log rotation	Write to log file fo	or data rec	ceived				
	Write to log		Write to log	g file be	fore parsin	g	\sim
	Log file path	C:\Log	is/				
	New file	Daily				~	
Log nie access	at	0:00:0	10 🚖 01				
	File name prefix/exte	ension	data				log
Log deletion	Limit size	0	₽ KB	\sim	Clear file		\sim
	Add date/time sta	amp to file	e name				
	Add data source	ID to file	name				
	Write date/time s	tamp to fi files	le before wri	ting dat	а		
		,					
Other							
Modules							
				()K	С	ancel

Fig. 11. Log-file forming modes

First of all, select log file what you can configure:

- Log file for data received all data received will be saved using these settings.
- Log file for data sent these settings will be used to save sent data. If you want to save data to the same file, as data received, then select the "Log file rotation for data sent" option from the list and enable two options: "Create log files on disk" and "Write to log for data received." Of course, you should configure a log rotation for data received before.

Set the "Create log file on disk" option to the checked state. Then you can set path to a folder, where files will be created with the help of a dialog window, which will be showed up after clicking a button with the "Folder" picture. You should select a necessary folder in the dialog window and click the "OK" button.

Log file path - the full path to a local or network folder, where the program will create new log files. The network path should be specified as: \\COMPUTER NAME\Folder\

Note: If the program works with network files, it greatly increases data flow through your network and decreases writing speed. Please, consider creating small log files. If your incoming data flow is fast, you may create log files locally. Later, you may sync a local folder with a remote folder using any 3rd party utility.

A log file name can be stamped with date and time. In this case, a new log file is created periodically. The format of a timestamp depends on the selected period. For instance, if the "File name prefix" field is set to "sample," the "File extension" field to "log," and the "File name format" option is "Daily," then each log file created will have the format "sampleYYYYMMDD.log". On March 21st, 2003, the log file will be "sample20030321.log". Please, note, that the final extension (after the final period), remains at the end of the file name.

Write to log - the option allows you to select when the program writes data to a log file. This feature is disabled in some loggers, and if the parser plugin is not available.

- **Before parsing** the program saves all incoming data without any modifications. If an external device sends binary data, the logger will create binary files.
- After parsing the program saves data after parsing. Generally, it is a parsed data packet.
- After filtering the program saves data after all filter plugins. The logger saves the content of the "FULL_DATA_PACKET" variable. A filter plugin may transform or fully change the variable. If you do not use any filter plugin, then this mode works as the previous.
- Screen content the program saves data to a log file as you see it in the main window. Generally, it is text content; therefore, the program creates a text log file.

The log rotation mode is defined by the following key parameters:

- File name prefix the text string, which will be added at file name beginning. The prefix may contain special placeholders like {NAME}. If you create log files before parsing the NAME can be any date formatting values below. For example: "data{YYYY}_{MM}_{DD}" returns a prefix like "data2019_01_01". If you create log files after parsing or filtering, you may use any parser variable. Then the file name may depend on some value in your incoming data.
- File name extension the text string, which will be a file extension (characters after the dot).

Limit size - the "Limit size" field specifies the maximum size in kilobytes of any log file. If you specify the zero file size, then the file size is not limited.

You may select from the following modes:

- 1. **Clear file** if the log file size will exceed the limit specified, then the log file content will be deleted, and file filling will start from the beginning.
- 2. **Rename old** if the log file size will exceed the limit specified, then the existing log file will be renamed.
- 3. Shift (no threshold) the older data over the limit specified will be removed from the log file.
- 4. Shift (with threshold) in this mode the program will wait when the file size will exceed the limit specified + the threshold value. After this, the older data over the limit specified will be removed from the log file.

If the program continuously works for a long time, it is possible that the log file will have a large size and this file will be inconvenient for looking and analyzing. Therefore, there is the possibility to create files in dependence with the time on a computer. You can select one variant predefined or set up a new one:

- **Daily** the file will be created with a name containing a prefix, and date in format DDMMYYYY, where DD is two-digit day sign, MM is two-digit month sign, and YYYY is four digits of the current year. The filename extension will be added at the end of the file.
- **Monthly** the file will be created with a name containing a prefix, and date in MMYYYY format. The filename extension will be added at the end of the file.
- Each data packet in different file in this mode, the program splits data flow to a different file. In this mode you should configure the parser or the program will split a data by timeout about 300 milliseconds.
- **Don't create new file** in this mode, the program will write all data to one file. It is recommended for a small data flow. Otherwise, your log file will be too big, and a performance of the program will fall down.
- User's format a file will be created with a name containing a prefix and date in showed by you format (for example, DDMMYYYY). The filename extension will be added at the end of the file. The file may not contain format signs, then file name will be constant. You should not use characters, that the OS doesn't allow in a file name, such as "/,\.*,?" and some others.
- Weekly create a new file every week. The file name will contain a week number.
- After data timeout the program will create a new file if the program didn't receive any data at the specified interval.
- **Hourly** the file will be created with a name containing a prefix, and date in format YYYYMMDDHH, where HH is two-digit hour sign, DD is two-digit day sign, MM is two-digit month sign and YYYY is four digits of the current year. The filename extension will be added at the end of the file.
- **Constantly named file** the current log file will have a constant name. When creating a new file, the existing log file will be saved using the new file name that will contain a date and time stamp.

If you need to create a new log file under more complex conditions, then you can try the additional "Scheduler & Hotkeys" plugin. You should download and install it separately.

Date and time formatting codes:

D - a day number (1-31).

DD - a day number with a leading zero (01-31).

DDD - a day of the week in the text form (Mon-Sat), according to the regional settings on this computer.

DDDD - a day of the week in the full text form (Monday-Saturday), according to the regional settings on this computer.

M - a month number (1-12).

MM - a month with a leading zero (01-12).

MMM - a month name in the text form (Jan-Dec), according to the regional settings on this computer.

MMMM - the full month name (January- December).

- YY last two digits of the year (00-99).
- YYYY the full year number (0000-9999).
- H the hour number (0-23).
- HH the hour number with a leading zero (00-23).
- N minutes (0-59)
- NN minutes with a leading zero (00-59).
- S seconds (0-59).
- SS seconds with a leading zero (00-59).

W - ISO week number (Monday is the start of the week).

WW - week number (the start of the week is defined in System - Regional settings).

To insert arbitrary text or a symbol into a date or time format, and to prevent it from being accidentally replaced with some value, you need to use quotes:

YYYY"/"MM"/"DD - 2023/01/01 YYYY"/"MM"/"DD"T"HH:NN:SS - 2023/01/01THH:NN:SS

Addinal parameters

CLIENTID - the unique client or data source ID (in some data loggers). CLIENTNAME - the unique client or data source name (in some data loggers).

Example: You want to create a log file every hour. It is desired that file name starts from "sample_log" and the file extension "txt".

Answer: set file prefix = sample_log_, file extension= txt (without dot!). In file name format show HHDDMMYYYY. Now the file will be created every hour. Naturally, you can set any formatting characters combination, described higher.

If you want to access to a log file while the program work, then you should configure <u>access mode</u> <u>settings</u> ²⁴ for the log file in the next chapter.

Add date/time stamp to file name - this option is available for modes #4 and #7 and allows adding date and time to the file name.

Add data source ID to file name - if this option is activated, then the program will append the data source name at the beginning of the file name, for example, COM1-sample20030321.log.

Write data/time stamp to file before writing data - if this option is activated, then the program will write a date/time stamp to a file before each data portion.

Overwrite existing files - this option is available for modes #4 and #7 and allows you to delete an existing log file before creating a new log file.

4.6.3.2 Log file access

During work can be such situations, when it is necessary to get access to a file with *current* data (current log file) from other applications (for example, for data processing). However, while you are accessing the current log file Advanced Serial Data Logger can't write data to a log file and all data at this moment will be lost. We recommend using a temporary file for data storage. It is the safest way. (fig. 12).

Configuration	options	?	\times
COM port	Log file access		
Log file	If the program can't write to a log file, then execute one of 1 Action: Ignore and not write Write to a temporary file, then append Display a message and stop work	following	g actions:
Log file access	Beep Write message to protocol file Error message Unable to write to file!		
Log deletion	Temporary folder		
Other			
Modules			
	ОК	Ca	ncel

Fig. 12. File access mode.

You can select one from the following variants:

- **Ignore and not write** in this mode, the program stop writing to a log file until it is locked. Therefore, data will be **lost**.
- Write to a temporary file, then append a temporary file will be created, to which writing will be done. After access to the current file will be got, temporary file content will be added to the end of the main file. However, mind that if file has a timestamp in the name, there can be a situation when the program copies the content of a temporary file to a new log file, for the next time.
- Display a message and stop work data will be lost until the dialog window is closed.

You can define your message text, which will be displayed at writing error to a log file. The sound signal can be on for an additional indication. You can also enable writing a message to a protocol file.

4.6.3.3 Log deletion

The deletion of files (fig. 13) will help you to avoid stuffing your hard disk with needless information. Log files can be deleted either depending on the time of storing or when the maximal number of files is exceeded.

When deleting files by the time of their storage, the files that were modified last time before the specified period are deleted.

When controlling the number of files, the files with the oldest modification dates are deleted first.

You can select both variants of file deletion. In that case, files will be deleted when either of the conditions is true.

Configuration	options			?	\times
COM port	Log deletion				
Log file	Remove old log files				
	After log file age	D A	Days		\sim
Log rotation	After number of log files				
	If you select both options log files will be conditions	e deleted at	executio	on of a	any of
Log file access					
Log deletion					
Other					
Modules					
		OK		Ca	ncel
	Fig. 13. Log deletion				

4.6.4 Modules

4.6.4.1 Introduction & setup

To extend program functionality, we implemented plugin modules. The module structure lets you to reduce your program size and purchase costs (you pay only functionality, which you need).

Advanced Serial Data Logger supports a few types of modules (fig. 14 - 16):

- Data query transmits queries or commands out the data source to control or query your devices.
- **Data parser** the data parser allows you to parse, filter, and format data from your data sources. Some of the advanced features of the parser are the ability to work with raw binary or hex data.

- Data filter data filters allow you to filter your data and modify a value of parser variables.
- **Data export** (fig. 16) Advanced Serial Data Logger has many modules and method for passing data to other applications, for example, there are modules for various databases, file formats (CSV, XML), data interfaces (OPC, DDE, MQTT), and many others.
- Events handling (fig. 17) these plugins are used to handle events generated by the Advanced Serial Data Logger software. Once an event occurs (for example, "Data source is opened" or "Configuration changed"), the plugin creates a text message using the specified template, sends a notification, does some actions, executes a program or a script, etc. The form of the notification or actions depends on the plugin settings.

Configuration	options				?	Х
COM port	Query Pa	rse Filter				
Log file	Data query modu	le				
Other	None			~	Set	up
Modules	Parser module					
	ASCII data quer	y and parser (def	ault.dll)	~	Set	up
Query Parse Filter	Parsing and e Parsing and e	exporting for data exporting for data	sent received			
1 11001	Select data fil	ter modules				
	Module name			Versio	n	
	Aggregation	(aggregator.dll)		4.0.28	8.1118	
Data export	Ueadband (deadband.dll) (expressions.dll)		4.0.27	(1103 11103	
_		(Chprossions.dif)		4.0.04		
P 1						
Events handling						
	Up	Down	F	lelp	Set	up
				ОК	Car	icel

Fig. 14. Activating plugins

Configuration	options			?	×
COM port	Data export				
Log file	Select data export modules				
Other	Module name		Versio	n	
Modules	DDE Server (ddesrv.dll)		4.0.29	.1103	
Query Parse Filter	OPC server (buildin.dll)		3.2.0.6	6	
Data export					
	Download plugin now Bedirect data to another configuration	Help)	Set	up
Events handling	Configuration				
		OK		Can	cel
	Fig. 15. Activating data export plugir	าร			

Configuration	options		? ×	
COM port	Events handling			
Log file	Select events handling modules			
Other	Module name	Versio	n	
Modules	Events notification (events.dll)	4.0.39	.1103	
Query Parse Filter	Internet sharing (ishare.dll)	4.0.29	.1110	
Data export				
Events handling				
	Download plugin now	Help	Setup	
		OK	Cancel	

Fig. 16. Activating events handling plugins

You can parse and export data sent and received. By default, only data received will be parsed.

Installation

You can easily install a new module. Usually, you should start the installation file and click the "Next" button for a few times. The installation wizard will detect a place of your Advanced Serial Data Logger software and place a plugin module and all distributive files to the "Plugins" folder, which is in the program folder (by default X:\\Program Files\Advanced Serial Data Logger\Plugins).

After the program restart, a module will be loaded and initialized. If the module is supported by our software, the module name will appear in the modules list. Most modules require additional settings. If you want to configure the plugin module, click the "Setup" button near it. If you selected the module and the "Setup" button is not active, then the module doesn't have additional settings and can work without additional settings. Please, read a user's manual of the corresponding plugin for additional information.

Configuration steps

1. Select and configure a query module. You may use a module of this type if you need to send some data to your device (for example, initialization strings or request strings).

- 2. Select and configure a parser module. This step is necessary because filter and export modules can use parsed data only. If you didn't select the parser module, then you can't configure the data filter and data export modules.
- 3. Activate and configure data export modules. You can select one or more modules simultaneously. The program will use selected modules simultaneously. Please, note, the program can' use the data export module, if you didn't configure the parser module.
- 4. Activate and configure event modules. You can select one or more modules simultaneously.

4.6.4.2 OPC server

Advanced Serial Data Logger has an internal OPC server. It means that any OPC compatible client application can get data from Advanced Serial Data Logger without any additional software. To connect to the OPC server, you need the server ID and name (fig. 17). Before using the OPC server on your computer, you should download and install the OPC Core Components Redistributable from www.opcfoundation.org (registration required).

OPC se	rver 3.2.0.6			?	×
OPC server	All available active items	Active clients	Predeclared item:	s	
ID : testcore. Name : Test GUID : {EAB	Instance.1 Core OPC server 2A29E-F53E-4D62-84F7-7	77DE9DFC31A}			
Set a bad qu	ality for an item after $ imes$ null:	s: 0			
Group tags	J	0.0	N		
Oungrou	ped	OBylu	II data source name	e	
💿 By data	source name	🔿 By va	alue DA1	FA_SOUR	ICE_IC
	ОК	Can	cel		

Fig. 17. OPC server parameters

Advanced Serial Data Logger parses all incoming data to one or more variables, and an OPC client gets it (fig. 18). After connecting to the OPC server, you will get a list of all variables.

Program use	31

	CIVEL 2.2.0.0				~
PC server	All available	active items	Active clients	Predeclared items	
7 Name		Value			
I- System					
ImW	/orking	1480355216	6		
- Lasi	Error				
- Lasi	Warning				
- Lasi	Message				
Prev	viousLogFile				
- Curr	entLogFile				
- Lasi	:DataBlock				
Data	aSourceID	0			
- COM1					

Fig. 18. OPC server active items

Clients activity is showed on the "Active clients" tab. The top node is client, below is a group of items and connected items. By double-clicking, you can get detailed information about each node.

OPC se	rver 3.2.0.6			?	×
OPC server	All available active items	Active clients	Predeclared items		
⊡- Client is ⊟- Grou	connected: 127.0.0.1 .µp1 FULL_DATA_PACKET				
	OK	Can	cel		

Fig. 19. OPC server clients

Advanced Serial Data Logger creates new variables at "on-the-fly" mode. The Advanced Serial Data Logger starts without any variables and gets it only after first data had been received. If your client OPC will connect to the OPC server before than data had been processed, then it will get an empty list of variables, and your OPC client should poll the OPC server for updating list of variables. If your OPC client doesn't allow it, then you can predefine all variables (fig. 20). In this case, the OPC server will create these variables with empty values, immediate after starting, and your OPC client will get these names while connecting.

32

OPC ser	ver 3.2.0.6			?	\times
OPC server	All available active items	Active clients	Predeclared items		
Note: You nee the OPC serve	зd predeclare items name if я. Туре an each parser iter	your client app m name in sepa	lication can't update rated line.	a name:	space of
Import	t all Clear				
COM1 FULL_ COM1 DATA COM1 DATA COM1 DATA COM1 DATA COM1 DATA COM1 CLIEN COM1 SCAN COM1 BARD	DATA_PACKET PACKET TIME_STAMP SOURCE_ID SOURCE_NAME SOURCE_FULL_NAME TID NERID CODE				<
	ОК	Can	cel		

Fig. 20. OPC server pre-declaration

4.7 Program options

4.7.1 Window view

This tab in program options (fig. 21) allows you to customize the appearance of the main window of the program (fig.1 6). You can access this tab through the "Options -> Program options" menu item in the main window.

Program opti	ons ? ×
o	Window view
Window view	Start in minimized state ✓ Minimize to SusTrau (name) near clock)
	Stay on top (over other windows)
\odot	Show data window
Date/time stamp view	Output data on screen in minimized state
	Main window view
	Font type
Protocol and	Background / font color 📃 💌 Size 10 🚔
errors handling	Screen buffer 200
4	Transparency (min - max)
Windows service	Wrap words
Restart & Security	Note: data will be displayed correctly on the screen only if you'll correctly set up a parser module on the "Modules" tab and select "After parsing" data view mode.
	OK Cancel

Fig. 21. Window view setting

You can set the following parameters:

- Start in minimized state at start Advanced Serial Data Logger will automatically minimize the program window to the taskbar or to the Systray (fig. 22).
- **Minimize to Systray** while the main window of Advanced Serial Data Logger minimizes, the program will automatically put its icon to the system panel near the clock.
- Show data window if you specify this option, then the program will display all data in the main window. You may disable this option if you log data from many ports on a slow computer. It reduces the computer's CPU usage.
- Output data on screen in minimized state if you'll enable this option, then the program will display processed data in minimized state. If you are logging many data sources on a slow computer, then you can decrease computer central processor load rate with disabling of this option.
- Font type the data will be displayed with this font type in the main window. We recommend using mono-spaced fonts in this field, such as Terminal, Courier, or System.
- Screen buffer when the number of lines in the main window exceeds the specified value, the program deletes old lines from the screen buffer.
- Window view this option group lets you configure data window view mode (a font color, a font type, a background color).
- **Transparency** in modern OS, it lets you set the transparency of the main window. The most left position is the normal window view, and the most right position is maximum transparency.

34

• Wrap words - if you didn't configure a parser module or your data flow doesn't contain a blocks separator, then your data without this option enabled will be displayed as one long string in the data window.



Fig. 22. Systray - panel near clock

4.7.2 Date/time stamp view

This group of options (fig. 23) allows configuring the format of date/time stamps that will be used in the main program window and log files.

Program opti	ons ? ×
Window view	Date/time stamp view Prefix/postfix character(s) for display output
Date/time stamp view	View mode
Protocol and errors handling	Font Font color
Windows service	Add data direction sign to a stamp Add data source ID to a stamp
Restart & Security	Preview: <20161128174702.711>
	OK Cancel

Fig. 23. Configuring data/stamp view

Prefix/Postfix characters for display output - these options allow you to define the beginning and ending characters of a date/time stamp that will be shown in the program window. When outputting data to a log file, the program uses individual characters [18] for each configuration.

View mode - allows you to select the standard or define the custom format of the date/time stamp.

Font - this group allows you to define the color and font of date/time stamp.

Add data direction sign to a stamp - if this option is activated, then the program will append TX or RX to the end of the stamp.

Add data source ID to a stamp - if this option is activated then the program will data append data source ID at the beginning of the stamp, for example, COM1.

4.7.3 Protocol and errors handling

While the program is running, it may generate many messages about errors or events. All these messages are being registered in a protocol file. The protocol file may contain messages from the main program and all working plugins. On this tab, you can define the kind of messages, which you want to put a protocol file (fig. 24). Here you can set the maximum protocol file size and the formatting mode.

Usually, the protocol file is in the "AppData" folder and has the name of the program with the 'log' extension.

On Windows 7 and higher: c:\ProgramData\Advanced Serial Data Logger\ On old OS: c:\Document and Settings\All Users\Advanced Serial Data Logger\

You can also open the protocol file from the "File" menu in the main window.

Program optic	ons			?	×
	Protocol and er				
Window view	Program messages Data query Data parser Data export Other	Category: Program m Errors protocol Window Warnings protocol	iessages 🗹 File		
stamp view		✓ Window	🗹 File		
Protocol and errors handling		Informations protoc	ol File		
Windows service	Limit protocol Clean protocol at program Don't display messages	size with size(Kb) (0 -) m start at unhandled exception	don't limit) ns	1024	-
Restart & Security	L Hestart program at exce	puon			
		C)K	Cano	cel
	Fig 24 Proto	col settings			

Fig. 24. Protocol settings

Advanced Serial Data Logger works with three types of messages:

- Information messages this type of messages informs you about current operations.
- Warnings warns you about possible failures or errors. Immediately user reaction is not required.
- Errors the program has detected an error which requires user attention.

There is the possibility to log the following events:

- Program messages messages about start or stop of the program, etc.
- Data query messages which are generated in a data query module.
- Data parser messages from a data parser module.
- Data export messages issued by a data export module.
- Other other message types.

You can write each type of messages to a protocol file or/and to the list in the main window. Please, specify necessary options for each message type at "Window" and "File" fields.

If you don't want to allow growing a protocol file size to an unlimited size, then you can enable the "Clean protocol at program start" or limit protocol file size in the "Size" field.

Some exceptional (unhandled) messages may occur while the program is running. In most cases, these messages affect the program, and the safest way is to restart the program. Please, specify the "Restart program at exception" option and the program will be restarted automatically.

If you want to look all program messages, then you can disable the "Don't display messages at unhandled exceptions" checkbox, and the program will open the exception message window with detailed information.

4.7.4 Service mode on Windows 2000+

4.7.4.1 Configuration

Windows 2000+ services let you:

- Control service on local and remote computers, including remote computers with Windows 2000+ system.
- Setup actions on emergency service restore in case of failure, for example, auto service or computer restart (only on computers with Windows 2000 or later).
- Create for services other names and descriptions, to find them easier (only on computers with system Windows 2000 or later).
- Run service before user login (password input).
- Service can be configured on automatic start after operation system load.

Note 1: you must be logged in as an administrator to change the configuration or control the service in any way (start, stop, pause, continue).

Note 2: On Windows Vista and later you should start the program with elevated administrator privileges.

If you want to use the program as a service application, then, please, go to the "Options -> Program options -> Windows service" tab (fig. 25), then enable the "Use program as a service" checkbox. Later, please, specify the start-up type of the service. There are the following variants:

Program optio	ins	?	Х
	Windows service		
Window view	Use program as a service Service settings		
ত	Startup type Automatic O Manual O Di	isabled	
Date/time stamp view	Allow service to interact with desktop	ser log off	
Protocol and errors bandling	Program depends on services Depending services		
Windows service	Silicon Image HBA Wakeup Utility [SiHbaWakeu Skype Updater [SkypeUpdate] Sony PC Companion [Sony PC Companion] SOL Server ISOLEXPRESS [MSSOL\$SOLEXPR SQL Server Agent (SQLEXPRESS) [SQLAgent\$S SQL Server Browser [SQLBrowser]	pService] {ESS1 SQLEXPRE	SS SS
Restart & Security	SQL Server VSS Writer [SQLWriter] Start Menu Logon Manager [Start Menu Logon M Steam Client Service [Steam Client Service] Superfetch [SysMain] Top Com Bridge service [TopComBridge] To Service [To Service]	lanager]	*
	ОК	Ca	incel
	Fig. 25. Service settings		

- 1. Automatic the service starts automatically with Windows, before user login.
- 2. Manual you can start the service application from the "Services" control panel (fig. 28).
- 3. Disabled the service is disabled, and does not start at all.

If you want to change the program settings while the program works in the service mode, you can start a second instance of the program on your desktop, make the necessary changes, and restart the service with the new settings.

Old Windows versions (before Windows Vista) allows you to use the service in the interactive mode. In this case, the program places an icon in the system area (fig. 26).



If the service should write data a database or use another service on your computer, they should be started before Advanced Serial Data Logger. You can configure a list of these services on the "Program depends on services" tab (fig. 27).

Program opti	ions ? ×
	Windows service
Window view	✓ Use program as a service Service settings
3	Startup type Automatic O Manual O Disabled
Date/time stamp view	Allow service to interact with desktop
	Note: The interactive service will be restarted while user log off
Protocol and	Program depends on services Depending services
errors handling	Start services (with a manual start option) after program running
	Start only if a device was been opened
Windows service	 Serv-U File Server [Serv-U] Silicon Image HBA Wakeup Utility [SiHbaWakeupService] Sony PC Companion [Sony PC Companion]
Postart &	SQL Server (SQLEXPRESS) [MSSQL\$SQLEXPRESS] SQL Server Browser [SQLBrowser] Steam Client Service [Steam Client Service] Tcp Com Bridge service [TcpComBridge]
Security	TelService [TelService]
	OK Cancel

Fig. 27. Service settings #2

Sometimes, you may need to start Advanced Serial Data Logger before starting other services. In this case, you should:

- Switch the start mode of a target service to "Manual."
- Start Advanced Serial Data Logger.
- Select the necessary service on the "Depending services" tab.
- Select the mode when the logger will start the selected service.
- Restart Advanced Serial Data Logger.

After you configured Advanced Serial Data Logger to work in the service mode, you need to restart a computer or start the service manually from the "Services" control panel (fig. 28).

				Pro	gram use	4
Services <u>File</u> <u>Action</u> <u>V</u> iew	Help			_		×
						_
🔍 Services (Local)	Name	Description	Status	Startup Type	Log On As	^
	ActiveX Installer (AxInstSV)	Provides Us		Manual	Local Syste	
	🚳 Advanced Serial Data Logge	Logging of		Automatic	Local Syste	
	🖏 AllJoyn Router Service	Routes AllJo		Manual (Trig	Local Service	e
	🆏 App Readiness	Gets apps re		Manual	Local Syste	
	Application Identity	Determines		Manual (Trig	Local Service	e
	Application Information	Facilitates t	Running	Manual (Trig	Local Syste	
	Application Layer Gateway	Provides su		Manual	Local Service	e
	Application Management	Processes in		Manual	Local Syste	•
	A	n	D	Manual .	1 1	×
	Extended Standard					

Fig. 28. Manual service run (in Windows 2000)

When the service is running, two processes should appear in the Task Manager: asdlogsrv.exe and asdlog.exe (fig. 29). The 'asdlogsrv.exe' application implements an interface between the service manager and the Advanced Serial Data Logger software. Unlike srvany.exe utility, our service stops safely.

Task Manager —								×	
<u>File Options View</u>									
Processes	Performance	App history	Startup	Users	Details	Servi	ces		
	^			37%	4	7%	94%	0%	
Name				CPU	Memory		Disk	Network	:
Apps (1)								^
> 🙀 Ta	sk Manager			12.2%	9.0	MB	0 MB/s	0 Mbps	;
Backgro	ound proces	ses (39)							
😽 🖓	Ivanced Serial D	ata Logger - L.		0%	8.4	MB	0 MB/s	0 Mbps	
> 🕅 Ad	Ivanced Serial D	ata Logger - L.		0%	0.6	MB	0 MB/s	0 Mbps	;
🔳 Ap	plication Frame	e Host		0%	2.0	MB	0 MB/s	0 Mbps	
> 🔳 CC	OM Surrogate			0%	2.5	MB	0 MB/s	0 Mbps	
O Cortana			0%	70.6	MB	0 MB/s	0 Mbps		
Device Census				0%	1.2	MB	0.1 MB/s	0 Mbps	
🔳 Ho	ost Process for V	Vindows Tasks		0%	0.7	MB	0 MB/s	0 Mbps	
Host Process for Windows Tasks				0%	4.8	МВ	0 MB/s	0 Mbps	×
Fewer details End task									

Fig. 29. Process list

If you want to configure the program as a service, then you must be logged with administrator rights. The service application can be controlled, stopped, or removed with the help of a command-line. Run asdlogsrv.exe with the following parameters:

- /? a short help.
- /I install service for starting in then manual mode.
- /A install service for starting in the automatic mode.
- /D install service in the disabled state.
- /R remove service from the computer.

4.7.4.2 Windows Vista+ notes

One of the ways Vista's security was improved was by separating system services and user applications into separate 'sessions'. Keeping the system services isolated helps to secure them better, but also makes any interactive interface unavailable to the user. That's where the Interactive Services Detection service comes in. When a service needs to interact with the user, Interactive Services Detection presents a dialog that will switch the user to the session where the service is

42

running so they can interact with the service. For an excellent, detailed description of this, see next paragraph.

Many sites recommend disabling this service, but doing so will result in you not being able to interact with any services that require your attention. This service is run manually by default, so there is little point to disabling it unless you don't want to be bothered by important information from the software you may be trying to run.

- Display Name: Interactive Services Detection
- Service Name: UI0Detect
- Process Name: UI0Detect.exe
- **Description**: Enables user notification of user input for interactive services, which enables access to dialogs created by interactive services when they appear. If this service is stopped, notifications of new interactive service dialogs will no longer function, and there may no longer be access to interactive service dialogs. If this service is disabled, both notifications of and access to new interactive service dialogs will no longer function.
- Path to Executable: %windir%\system32\UI0Detect.exe
- Default Start-up:
- 1. Home Basic: Manual
- 2. Home Premium: Manual
- 3. Business: Manual
- 4. Enterprise: Manual
- 5. Ultimate: Manual

4.7.5 Restart & Security

Sometimes the program should be restarted. For example, if you've changed the program settings remotely and want to reload program automatically with the new settings. To do that, specify the time for restarting the program on the "Restart & Security" tab in program options "Options - Program options". Just specify the time of day, when the program should be being restarted.

Program option	ns		?	×
	Restart & Security			
Window view	Auto program restart Off			
0	O At shown time 1:00):00		
Date/time stamp view	Security Protect by password	•••		
Protocol and errors handling Windows service	Password protected operations Change program settings Exit program Add configuration Create backup Restore from backup Switch data sources			
Restart & Security				
		ОК	С	ancel

Fig. 30. Program restart settings

On this tab, you can also protect some actions with the program by a password. To do that, activate the "Protect by password" option, define a password and select protectable actions.

6 Having problems?

6.1 Program doesn't run or work

It is necessary to make sure in proper time installation on your computer, so as if you put clock after program installation, protection from use after trial period works.

Also, the program will not work, if you use a software debugger in your environment like WinDbg. In any other case, please, contact us on support@aggsoft.com.

44

6.2 FAQ

Question: Does the program work with virtual COM ports? USB-COM converters? **Answer:** Absolutely!

Question: Why COM port doesn't open?

Answer: Probably, another program already uses it (the selected COM port). It can be a service application, for example.

Question: What to do?

Answer: Close the application that uses this communicative port (for a DOS application close also a DOS session window). Alternatively, use another communicative port. Probably, a COM port wasn't properly closed.

Question: Is it possible to set variable data transmit rate or transmit 9 data bits? **Answer:** No, the Windows operating system doesn't have such the feature.

Question: What socket type to use: DB25 or DB9? **Answer:** It does not matter. All modern computers have DB9 only. Alternatively, they do not have DB9 sockets at all.

Question: What cable do I need: straight or crossed (null-modem)? **Answer:** It depends on your device. Generally, you should use a null-modem (crossed) cable with the following layout:

> Device | Computer RXD <--> TXD TXD <--> RXD GND <--> GND

If a device uses special signals like DTR or RTS, and you don't want to use hardware data transmit control, you need to connect pins 7 and 8 of the DB9 socket on the device side.

You can find more hardware related articles on our site https://www.aggsoft.com.